

## Ram Air Install for 2013 models


### Tools Needed:

Hacksaw Or Dremel

8mm Wrench or Socket

10mm Wrench or Socket

1. Locate the area by the bracket where you will be cutting. The goal here is to leave enough hard plastic inside the fabric piece so that the Ram Air tube will have something to grip onto.

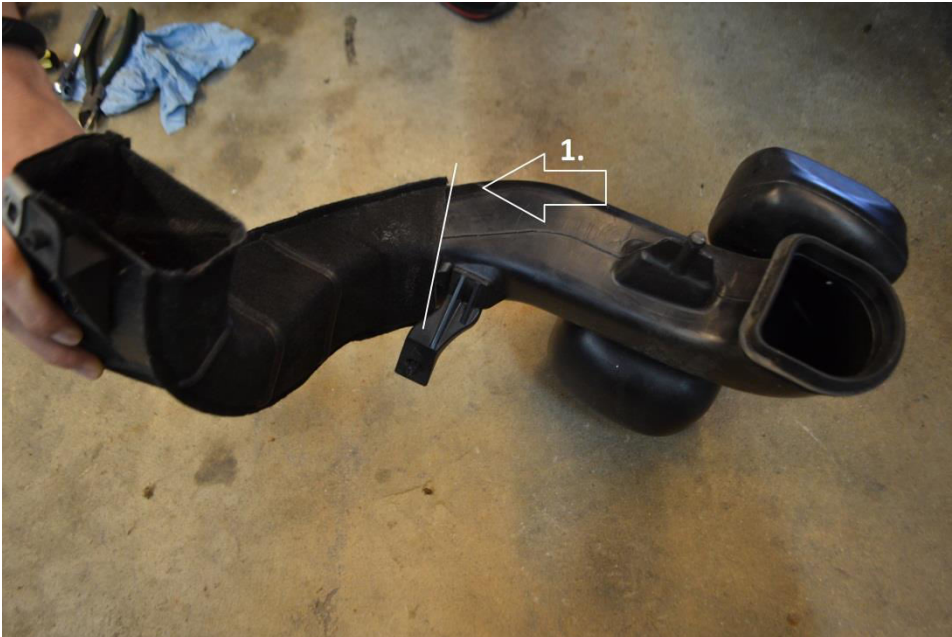

2. Cut.



3. Finished piece should look something like this. Be sure to clean left over plastic from the cut.



4. Take a razor or knife and trim the flaps off of the side of the fabric piece. Just enough for the ram air to cover.



5. Ram Air tube and fabric covered piece should look something like this.



6. Now separate the ram air tube and the fabric piece. Secure the fabric piece back into the fender/ front bumper area. Be sure to secure with 10mm bolt you removed earlier.
7. Place ram air on new opening on the fabric piece. Secure with clamp.
8. Place smaller side of ram air around the Apollo filter. Secure with clamp.