


TAP HOLE FOR PCV LINE (9/16" HOLE)

STEP 1

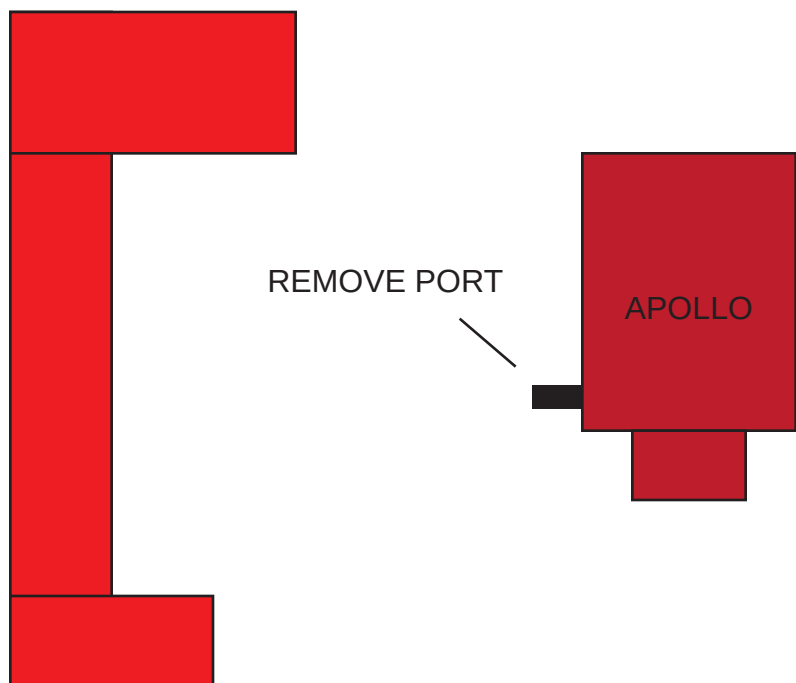


REMOVE PORT


APOLLO

SCREW IN PORT FROM APOLLO FILTER

LUBRICATE (Soap & Water/Armoral Etc.)

STEP 2

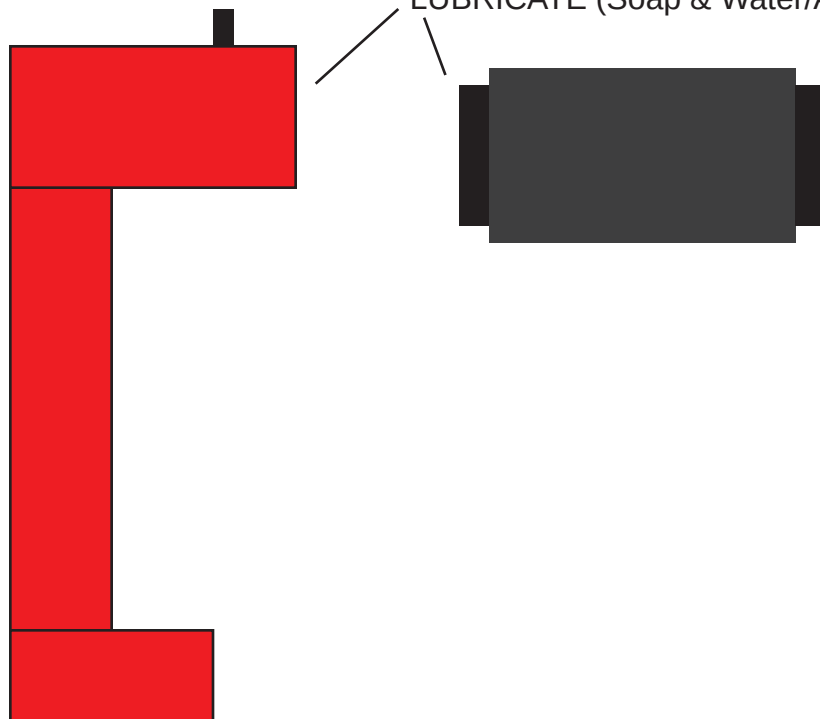

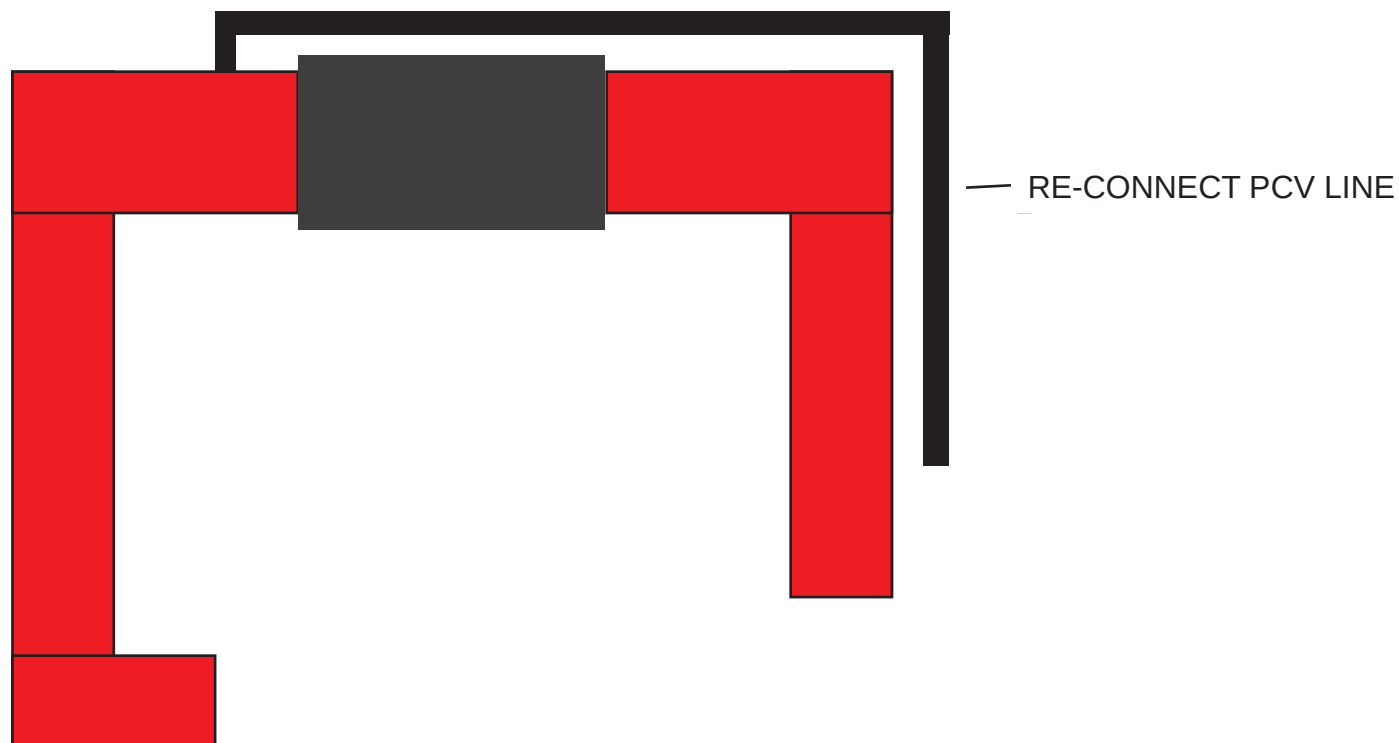

STEP 3

TIPS:

- REMOVE ENTIRE INTAKE AND ASSEMBLE OUTSIDE OF ENGINE BAY
- UTILIZE A VERY SMALL FLAT TIP SCREW DRIVER TO ASSIST IN FITTING SILICONE BY SLIDING FLATTIP AROUND CIRCUMFERENCE
- USE LIBERAL AMOUNT OF LUBRICANT

