

Dodge Dart 1.4L Intake Installation Instructions

Tools Required:

- 10mm Wrench or Socket
- 8mm Wrench or Socket
- 6mm Wrench or Socket
- Flat head screw driver



Stock system removal

- Start by removing clamps securing the intake tube from the turbo to the airbox. Start with the turbo side clamp.
- Remove airbox side clamp.
- Use a 10mm to remove the bolt hold the airbox down.
- Disconnect the two hose's coming off of the stock intake tube.
- Remove intake tube and air box completely.




HPSI Motorsports Intake installation

- If you removed the stock resonator in wheel well be sure to use included split silicone hose to line the inside of the air box mount.

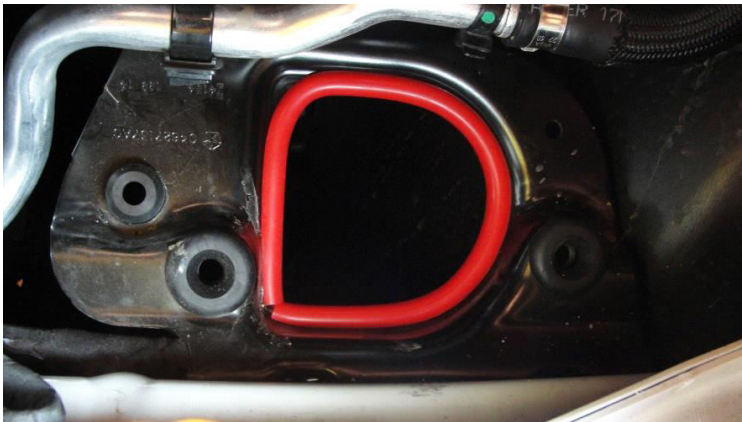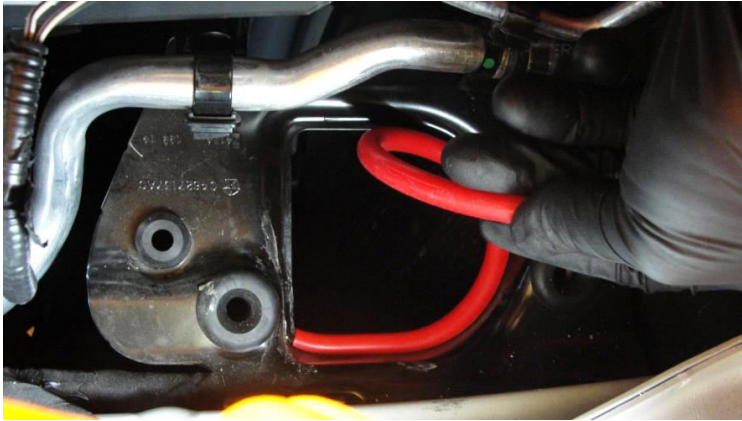


- Place smaller side of silicone around turbo opening.

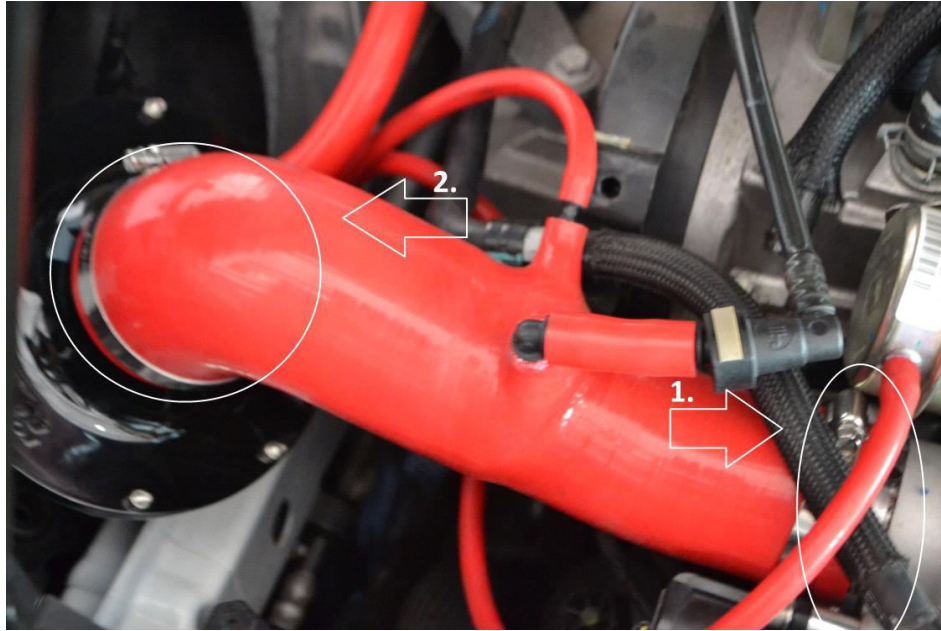

- Place Apollo filter into silicone opening but do not secure clamp until everything is oriented.

- Connect larger hose with clip to adapter.
- Secure the smaller line onto the smaller size adapter(clamp is not required) .

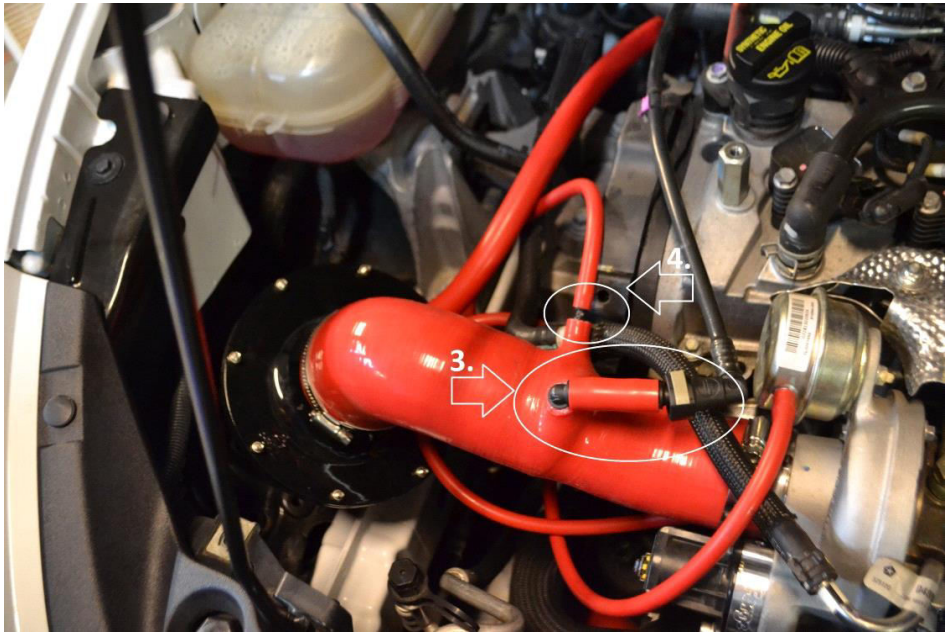

- Connect the small side of the large silicone hose provided to fitting on the Apollo filter.



- Connect the other side of that hose to the PCV breather fitting

- Make sure to secure all clamps and double check all hose fittings before starting your vehicle.